



DIGITAL PERSONAL STUDIO Software Version 1.1 Addendum

WARNING

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Operator's Manual

Table of contents

Additions and changes of the software version V1.1

Extra BUS	1
Extra BUS Operation	1
Assigning Extra BUS signal to Tracks	2
Short-Cuts in Locate	3
Zero Return (Locating the zero position of the time counter)	3
GO to END (Locating the end point of the song)	3
Pre-Locate (Moving a few seconds backward)	3
Post-Locate (Moving a few seconds forward)	3
ALIGN (Defragmenting a disk)	3
Other additions and changes	4
Accessing the CONTROL PANEL screen from the TRACK VIEW screen	4
MASTER OUT Gain Control	4
Display style of Remain time	4
Display of OC Version Number	

Additions and changes of the software version V1.1

Extra BUS

In addition to the SEND A and SEND B bus lines as the AUX send, an extra BUS line in stereo, Extra BUS, has been implemented. With this Extra BUS, it makes it easier to perform ping-pong recording in track down.

The signal for the Extra BUS is routed via the BUS ON/OFF switch in stereo, located after the PAN control in the mixer signal line. The signal routed on to the Extra BUS can be assigned to the tracks in the SOURCE page of the ASSIGN mode.



Extra BUS Operation

The Extra BUS can be switched ON (enabled) or OFF (disabled) at the Extra BUS: field added in the SETUP page of the MIXER mode.

Select: SETUP	
EQ type:3BAND	
AUX type:STEREU Extra BUS:OFE	
▼ SELECT ▲	

When the Extra BUS is switched ON, the BUS ON/OFF page will appear between the SETUP page and the CHAN-NEL ON/OFF page at the Select: field.

Select: BUS_ON/OFF :	Select: BUS_ON/OFF :
	00000000
1 2 3 4 5 6 7 8 9 10 11 12	1 2 3 4 5 6 DLDR
 SELECT A HEFFECTH SCENE 1 	 SELECT A HEFFECTH SCENE

At this page, you select the channels you want to route to the Extra BUS. This page will not appear when Extra BUS is set to OFF.

➤ Note: When the Extra BUS is switched ON, the number of available channels for simultaneous EQ will be reduced. The number of available channels depends on the selection of the EQ (2-band or 3-band) and the sampling frequency used.

Relation of BUS ON/OFF vs. EQ and FS

FS	EQ	BUS OFF	BUS ON
32.0 kHz	2-band	12	11
32.0 kHz	3-band	6	5
44.1 kHz	2-band	12	11
44.1 kHz	3-band	6	5
48.0 kHz	2-band	9	5
48.0 kHz	3-band	5	4

Assigning Extra BUS signal to Tracks

The BUS L and BUS R options have been added to the SOURCE page of the ASSIGN mode.

ASSIGN INPUT	SOURCE TO TRACK 1-12
BUS L	Track 1 Input in lowercase
BUS R	Track 2 letters is routed
ANALOG IN-1	➡Track 3 to THRU MIX (not
analog in-4	➡ Track 4 : recorded).
FX RTN THR	

When $BUS \ L \text{ or } BUS \ R$ is selected as an input source, the signal from the Extra BUS will be assigned to those tracks selected.

The options of the Extra BUS will appear as $BUS \ L$ or $BUS \ R$ when the Extra BUS is switched ON and they will appear as $bus \ l$ or $bus \ r$ when the Extra BUS is switched OFF. While the Extra BUS is switched off, no signal will be input to those tracks selected for either $bus \ l$ or $bus \ r$. When the Extra BUS is switched on, the signal from the channels selected at the BUS ON/OFF page of the MIXER mode will be input.

Short-Cuts in Locate

Zero Return (Locating the zero position of the time counter)

When the [<< (rewind)] key following the [GO TO] key is pressed, the DPS12 will jump to the zero position of the time counter.

This is the same function as pressing the [F3] key of the LOCATE LIST window.

GO to END (Locating the end point of the song)

When the [>> (fast forward)] key following the [GO TO] key is pressed, the DPS12 will jump to the end point of a song.

This is the same function as pressing the [F4] key of the LOCATE LIST window.

Pre-Locate (Moving a few seconds backward)

When the [TO] key following the [GO TO] key is pressed, the DPS12 will jump to a position a few seconds backward. The amount of time is as set for the TO TIME.

Post-Locate (Moving a few seconds forward)

When the [FROM] key following the [GO TO] key is pressed, the DPS12 will jump to a position a few seconds forward. The amount of time is as set for the FROM TIME.

ALIGN (Defragmenting a disk)

The two methods of Align process options, JOIN and FULL, have been implemented to better handle disk usage.

The JOIN process combines small audio data into one chunk of data. This takes a short time to complete. This process is effective when the DISK ERROR message appears after short recordings are made repeatedly without extensive edits.

The FULL process defragments all the fragmented data on the disk. This may take a while to complete, depending on the condition of data on the disk. This process is effective when the DISK ERROR message appears after extensive edits are performed.

	DISK ALIGN
Aligr	will clean up data on disk.
[[JOI	1] Joins consecutive data.
[[FUL	L] Defragmentation,
	may take a while.
CANC	EL JOIN

Select the processing method according to the usage of the disk.

Other additions and changes

Accessing the CONTROL PANEL screen from the TRACK VIEW screen

The CTRL P [F3] key has been added to the TRACK VIEW screen. This allows you to access directly the CON-TROL PANEL screen without going through the MAIN screen.

MASTER OUT Gain Control

The GLOBAL page has been added in the MIXER mode. This allows you to adjust the gain of the MASTER OUT digitally.



3 steps of ΘdB , +6dB and +12dB options can be selected. The level of the MASTER OUT and Headphone output will be changed.

→ Note: The default Gain setting is 0dB. When the +6dB or +12dB options are selected, the sound may be clipped when the signal level is high.

Display style of Remain time

The displayed units of Remain time in the MAIN screen will automatically change from 00h00m (hours/minutes) to 00m00s (minutes/seconds) when the remaining time becomes short.

Display of OS Version Number

The version number of Operation System software is now displayed when the INFORM [F1] key is pressed after selecting the SCSI ID number of DPS12 in the DISK mode.